

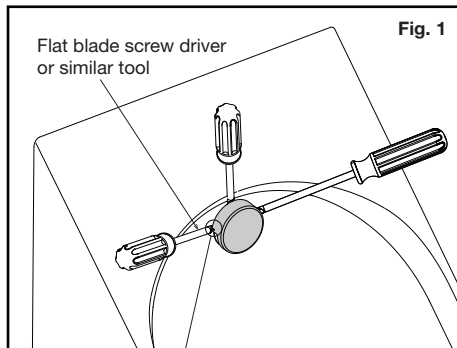


Fig. 1

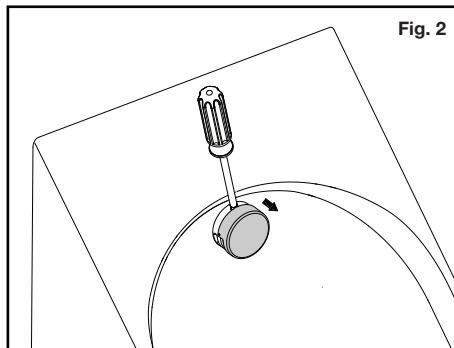


Fig. 2


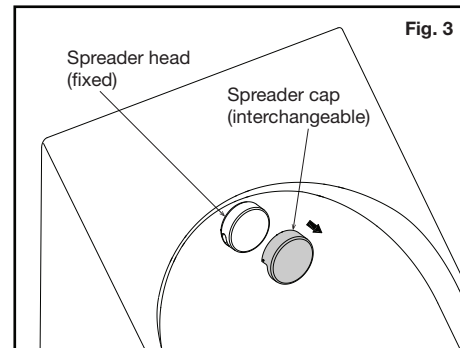


Fig. 3

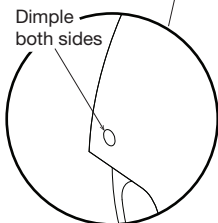

Dimple  
both sides

### CAP REMOVAL

- 1- Using a flat blade screw driver or similar tool, pry out the cap starting from the sides around the "Dimples" and then top of the cap, as shown in **Fig. 1** and **Fig. 2**. A piece of cardboard or similar must be used to place in between the screw driver and the urinal surface to prevent any damage to the urinal. An insulated screw flat blade driver can also be used instead.
- 2- Pull the cap out, as shown in **Fig. 3**, and discard.

### CAP INSTALLATION

- 1- Take the new spreader cap out of the box.
- 2- Align the "U" slot at the bottom of the cap with the grub screw under the spreader head as shown in **Fig. 4** and **Fig. 5**, and push it all the way in.

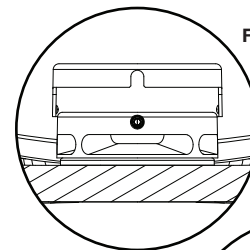


Fig. 4

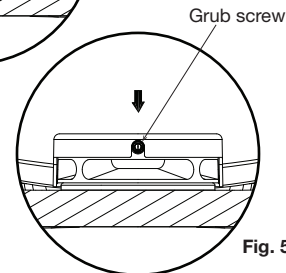


Fig. 5