




The Urinal Shop

uridan
waterless solutions

Installation Instructions


Parts List |

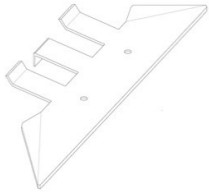

1 x fitting No. 4



2 x screws fitting No. 4

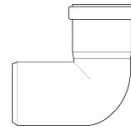

1 x 87° bend

Fitting Kit |



1 x uriLOCK 0.3 L



1 x uriCLEAN 0.5 L



1 x uriCLOTH



1 x Cover



1 x suction device


Note |

Installation of the uridan waterless urinal is very simple.

If you are retrofitting existing flushing urinals with uridan waterless urinals, please ensure that the sewer line is jetted and clean of uric scale before installation. Please also remove any existing s-trap to avoid double trapping the urinal.

The uridan urinals work without water, and must be fitted to a 50mm waste pipe. Installation should be carried out by authorized plumbers in accordance with AZ/NZS3500.2.


PLEASE NOTE: The undiluted discharge from a waterless urinal must not be transported through copper or copper

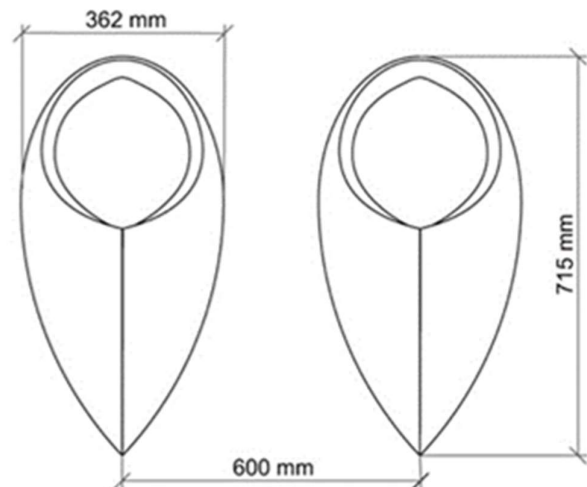

Sydney - Head Office
1800 URINAL (874625)
(02) 9863 0968
info@theurinalshop.com.au

ADMIRAL MINI GHMA-10

glass reinforced plastic (GRP) | | horizontal waste

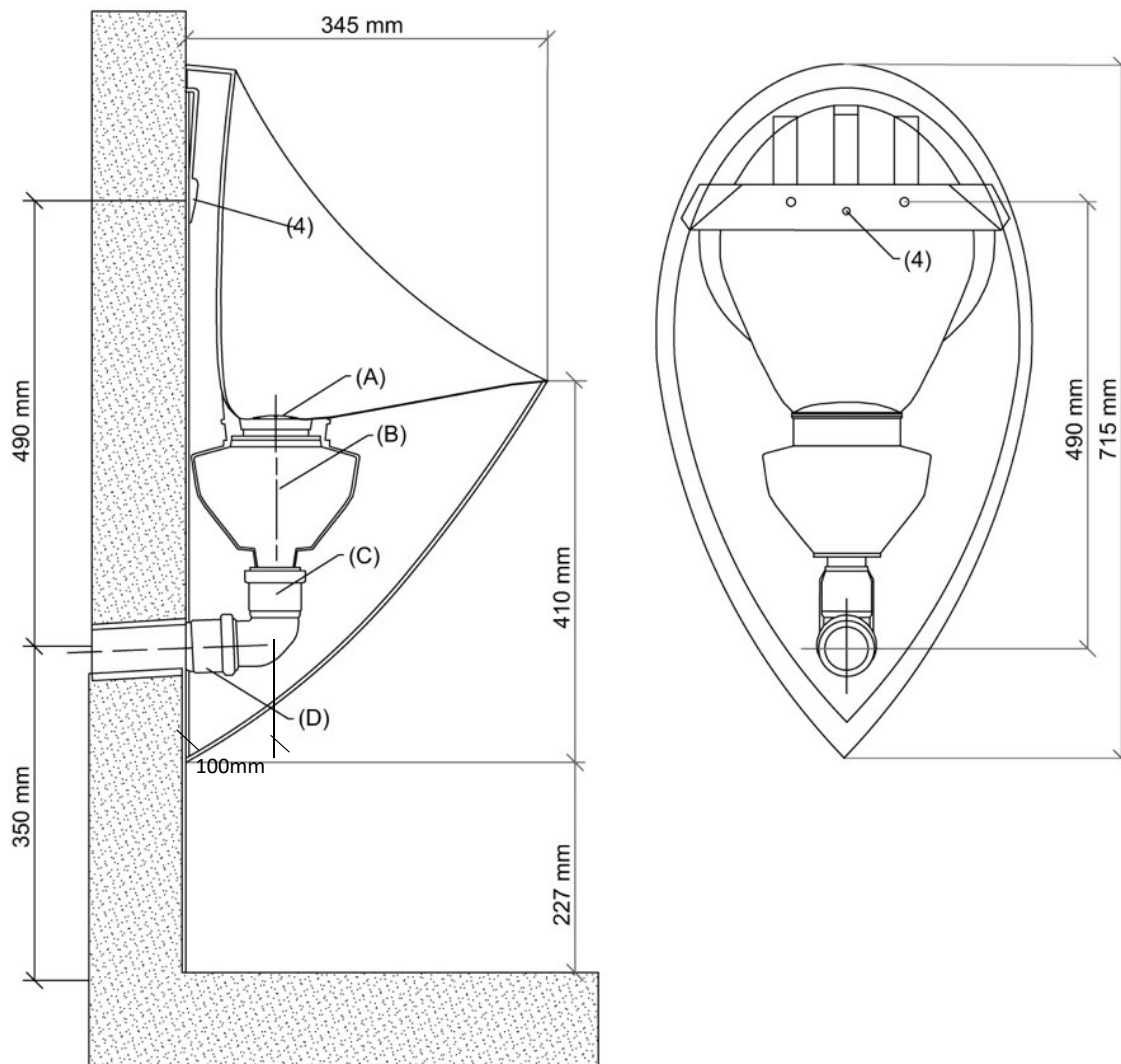

Installation

1. Mark holes for fitting No. 4 and secure on wall.
2. Insert extension pipe (D) on the 87 ° bend (C). Keep a distance of 100 mm from the wall to the middle of the pipe. If necessary shorten the extension pipe. Place the 87 ° bend with the extension pipe on the outlet pipe.
3. Remove the 87 ° bend with the extension pipe and place on the waste trap.
4. Place the urinal with the pipe on the outlet pipe. Lift the urinal and position on fitting (4).
5. Fill the waste trap (B) with water.
6. Insert the stainless steel cover (A).
7. Pour 1 bottle uriLOCK (0.3 litre) over the cover.
8. Seal the gap between the wall and the urinal with silicon. Please Note: Do not put silicone on the lower tip of the urinal!

Please leave customer care booklet, cleaning and maintenance instructions, cleaning spray, cleaning cloth and suction device with customer.