


Changing the Key-Adapter®




1 Flush the High Performance Key-Valve® (HPKV) thoroughly with water.

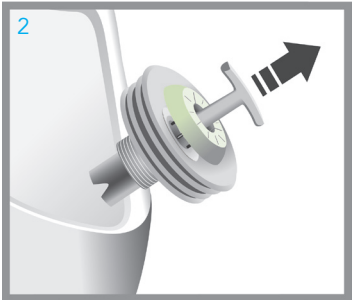


2 Using the Service-Key, remove the HPKV and the Key-Adapter together (do not unscrew the valve separately).




3 Dispose the HPKV and the Key-Adapter as normal waste.

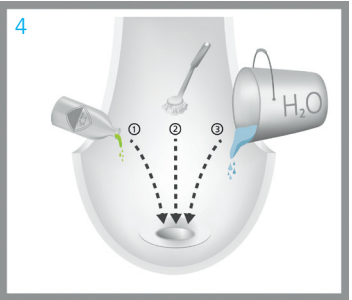


4 Flush with a bucket of water containing cleaner.
 1) Use concentrated acid cleaner.
 2) Scrub thoroughly, using a brush.
 3) Flush with a bucket of water containing cleaner.

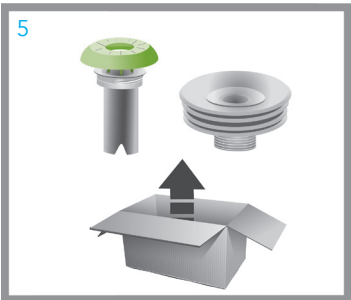


5 Take a new Key-Adapter and HPKV out of the packaging.

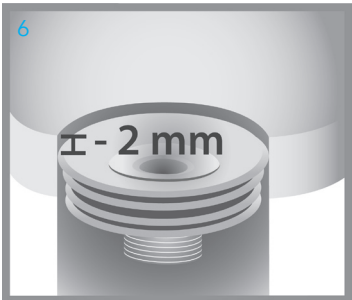

6 Place the new Key-Adapter in the drain opening and press it in until it fits properly in the urinal opening.

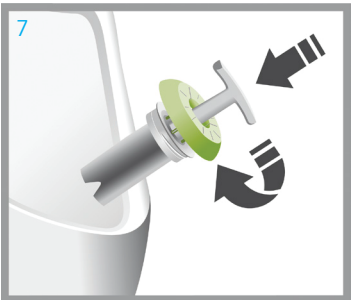

7 Using the Service-Key, screw the HPKV in clockwise into the Key-Adapter until the valve sits evenly.

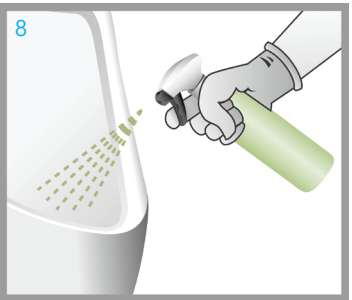

8 Activate the new HPKV by flushing about 5 litres of soapy water. Spray urinal with pH neutral cleaner*. Do not wipe afterwards.

The Key-Adapter should be changed every 1 to 2 years in accordance with its optical appearance. At this time, inspection and cleaning of the drainpipe is recommended.

* Use a mild surfactant based and pH neutral cleaner (0 – 15 % anionic and/or non ionic surfactants). Uncritical additives are enzymes, perfume, oils, dyes, inhibitors, etc.

CAUTION: No use of harsh cleaner as for instance chlorine or bleaches as well as no solvent based cleaning agents. No use of acids or alkalines.

- Adapter SET**
- Article numbers**
- 200 000 - Adapter SET Ernst-Becken
 - 201 000 - Adapter SET Ernst-Rinnen
 - 203 000 - Adapter SET Geberit
 - 204 000 - Adapter SET Hellbrok
 - 205 000 - Adapter SET Uridan
 - 206 000 - Adapter SET Urimat



Sydney - Head Office
 1800 URINAL (874625)
 (02) 9863 0968
 info@theurinalshop.com.au