

DAILY CLEANING



WARNING!
MOP BUCKETS SHOULD NEVER
BE EMPTIED INTO URINAL

1

REMOVE ANY DEBRIS
FROM BOWL



WARNING!
AT NO TIME SHOULD ACID,
BLEACH OR DESCALER BE
USED TO CLEAN URINAL.

2

SPRAY **CAROMA H₂ZERO
CLEANER & DEODORISER**
ONTO BOWL



WARNING!
DO NOT USE ABRASIVE
DETERGENTS, CLEANERS OR
CLOTHS TO CLEAN OR DRY
METAL GRATE.

3

WIPE CLEAN AND DRY

10,000 USES OR 6 MONTH MAINTENANCE*



RINSE GRATE AND BIO-SEAL
BY POURING APPROX. 600ML
OF WATER INTO URINAL

TOOL BUTTON

1

PRESS TOOL BUTTON AND
SLIDE PRONGS UNDER
GRATE



VANDAL RESISTANT ONLY
FOR CERAMIC GRATE
OPTION PROCEED TO STEP 3.

CLICK
UNLOCK

2

RELEASE BUTTON AND
ROTATE TOOL **CLOCKWISE**
TO **UNLOCK** GRATE



FOR OPTIMUM AESTHETICS,
IT IS RECOMMENDED THAT THE
BIO-FRESH IS REPLACED EVERY
3 MONTHS

BIO-FRESH

3

PULL TOOL UP TO REMOVE
GRATE AND EXPOSE
BIO-FRESH




4

PRESS BUTTON AND ALIGN
PRONGS WITH CLIP DETAIL
ON BIO-FRESH



5

RELEASE BUTTON

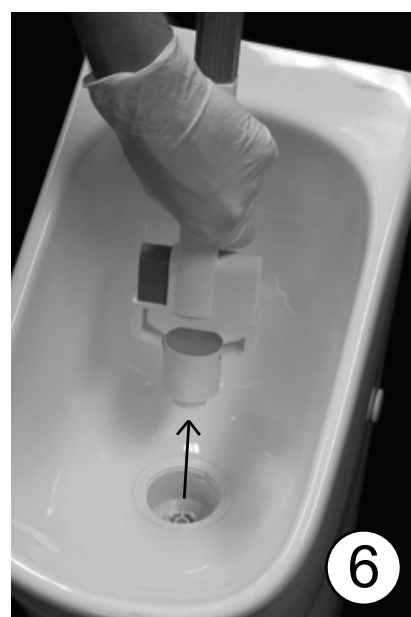


6

PULL TOOL UP TO REMOVE
BIO-FRESH AND DISPOSE

* Based on a typical office environment.
For high usage areas shorter replacement
periods may be required.

10,000 USES OR 6 MONTH*
MAINTENANCE*

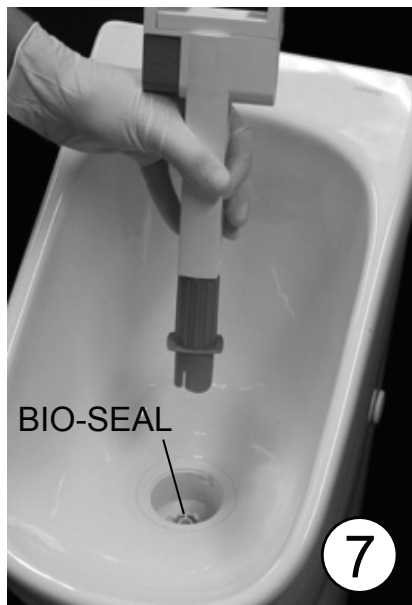


INSERT TOOL CAP AND LOCATE ON BIO-SEAL




PUSH DOWN AND ROTATE TOOL **CLOCKWISE** TO **UNLOCK** BIO-SEAL




PULL TOOL UP TO EXPOSE BIO-SEAL. **POUR WATER INTO URINAL TO CLEAN PLASTIC WASTE**

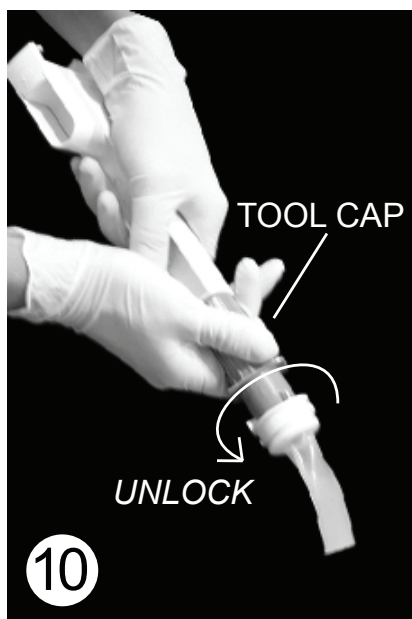

ROTATE TOOL CAP **CLOCKWISE** TO **UNLOCK** BIO-SEAL

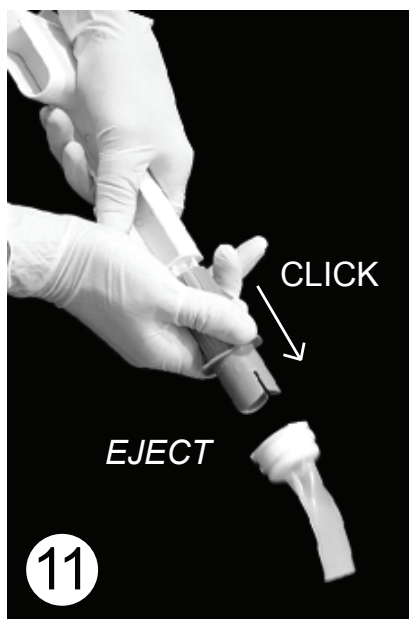

DIRECT TOOL OVER WASTE BIN, PUSH TOOL CAP TO **EJECT** BIO-SEAL

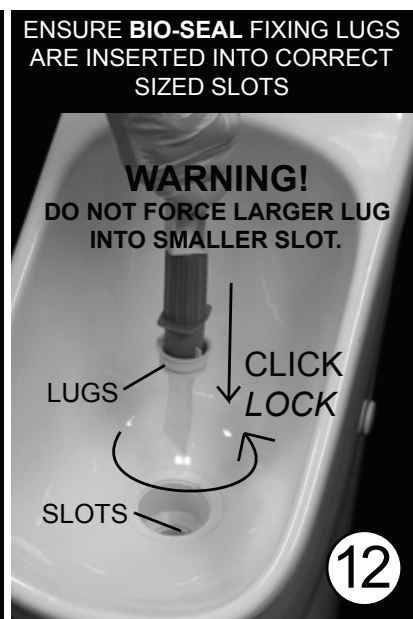

INSERT NEW BIO-VALVE AND ROTATE **ANTI-CLOCKWISE** TO **LOCK**

REPLACEMENT

ENSURE **BIO-SEAL** FIXING LUGS ARE INSERTED INTO CORRECT SIZED SLOTS

WARNING!
DO NOT FORCE LARGER LUG INTO SMALLER SLOT.

LUGS
CLICK
LOCK
SLOTS




INSERT NEW **BIO-FRESH** AND **LOCATE** ONTO BIO-SEAL



LOCATE METAL GRATE AND ROTATE **ANTI-CLOCKWISE** TO **LOCK**

caroma® H₂ZERO

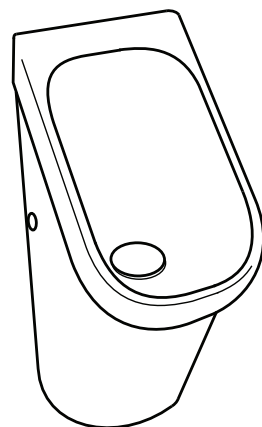

MAINTENANCE AND SERVICE GUIDE

* Based on a typical office environment. For high usage areas shorter replacement periods may be required.