

SCOPE OF APPLICATION

AB-CIS-PC - Right Bottom Inlet

AB-CIS-PC-SE-L - Left Side Inlet

AB-CIS-PC-SE-R - Right Side Inlet

IMPORTANT INFORMATION



Note: Please follow the below procedures. If the below procedures are not followed it may impact the life of some components and void warranties.

- Cistern must be installed by a qualified plumber in accordance with the Plumbing Code of Australia (PCA), AS/NZS3500 and the Manufacturer's instructions.
- All pipework must be thoroughly flushed to remove any debris prior to installation as foreign materials may cause damage to internal parts and affect performance.
- If the unit is replacing an existing unit please ensure the water supply is turned off.
- Isolating stop taps must be fitted to the inlet connections in accordance with the Plumbing Code of Australia (PCA) and AS/NZS3500.
- Do not use plumbers putty to seal valves or inlets.
- Do not use in-cistern toilet cleaners/toilet blocks with this cistern. These cause damage and failure of cistern components which may cause flooding and property damage.

INSTALLATION INSTRUCTIONS

Step 1

Unpack the cistern, make sure all parts are included and no damage is present.

Step 2

The fixing location of the cistern needs to be considered prior to installing. Removing the lid for access to any parts for service, as well as the flush pipe length should be taken in to account.

Step 3

Remove the cistern lid using an allen key. Holding the cistern in desired position, mark the 2 fixing holes, ensuring the cistern is level.

Step 4

Fix the cistern to the wall with stainless steel fixings.

Step 5

Connect your water source to the inlet valve and ensure there are no leaks.

Step 6

Ensure flush pipe is of sufficient size for flush volume. Measure and cut flush pipe to the correct length and fit to the cistern and urinal.

Step 7

Fill the water level to the "Working Water Level" mark inside the cistern case. Adjustments may be required to the inlet valve. Please see separate instructions (included inside carton).


Step 8

Full flush volume required is dependent on length of urinal, this pull chain cistern rating is 1.8L per stall (600mm). Adjustments may be required to the outlet valve. If required, please see separate instructions (included). Flush test the cistern a minimum of two times.

Step 9

Re fit cistern lid.

DO NOT USE IN CISTERN TOILET CLEANERS/BLOCKS WITH THIS CISTERN

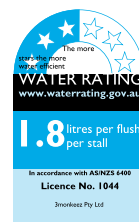

CARTON CONTENTS - 1x Pull Chain Cistern with Cistern Inlet Valve and Outlet Valve, 1x Installation Instructions

AB-CIS-PC



AB-CIS-PC-SE-L



AB-CIS-PC-SE-R



REPLACEMENT PARTS CODE LIST

P-CIS-inlet - Bottom Entry Cistern Inlet Valve - 1/2" MIBSP

P-CIS-Inlet-Side Ent - Side Entry Cistern Inlet Valve - 1/2" MI BSP

P-CIS-PC Outlet - Pull Chain Outlet Valve - 50mm MI BSP

STAINLESS STEEL MAINTENANCE AND CLEANING INSTRUCTIONS

Stainless steel products must be cleaned on a regular basis to maintain the ability to resist corrosion. The surface of stainless steel has a protective layer that creates a protective shield against oxidation; which makes it durable and long lasting. Protecting this layer is important to ensure the longevity of this product.

Cleaning stainless steel products is an easy task when done regularly:

- Clear away all debris from the surface with a microfiber cloth or soft sponge; don't use abrasive materials as they have a negative impact on the protective layer.
- Once cleared of debris, go over the surface with a food safe stainless steel cleaner, bicarb soda or mild detergent and water. The best chemicals for stainless steel contain alkaline and don't have chloride in them.
- To remove stubborn stains, use a good quality stainless steel cleaner and non abrasive cloth.
- Rinse thoroughly with clean fresh water.
- Towel dry the product with a soft dry absorbent cloth after cleaning and use. This will prevent mineral deposits building up on the surface of the product.
- Once dry, use a food safe stainless steel or metal polish.
- Follow the grain of the metal to ensure the best results and to avoid further damage to the surface.
- Always keep the product clean and dry when not in use.
- Don't leave anything citric on the product as it can etch the surface over time.
- Don't leave soaps and other cleaners on your stainless steel product overnight.
- Don't leave damp sponges or cloths on the inside or edge of the product when not in use.

TIP - Cleaning your stainless steel equipment after each use as above will ensure the product remains in good condition.



The Urinal Shop

Your one stop shop for anything to do with urinals and their accessories

P: 02 9863 0968

F: 02 9863 8569

sales@theurinalshop.com.au
theurinalshop.com.au



The Urinal Shop


SIGN OFF SHEET CIS-60-I - Cistern Case




Please Clearly Draw Holes on Diagrams Below.
Hole Size/s and All Dimensions Must Be Shown.

1. Quantity - _____


Top Of Cistern

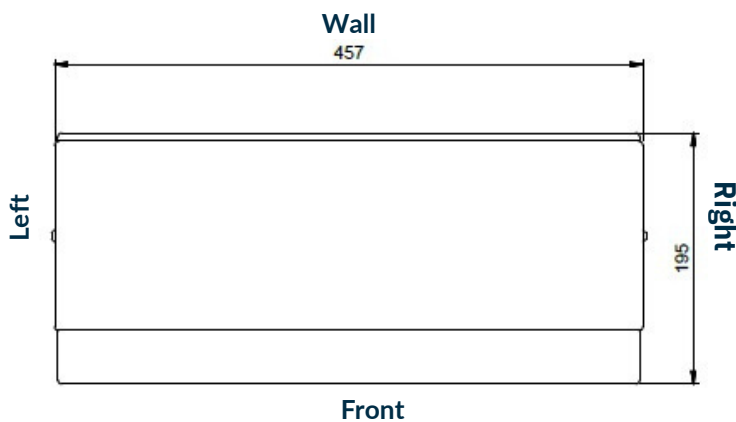


Left Side Of Cistern

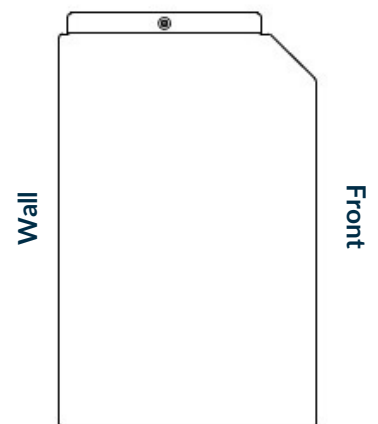

Bottom Of Cistern

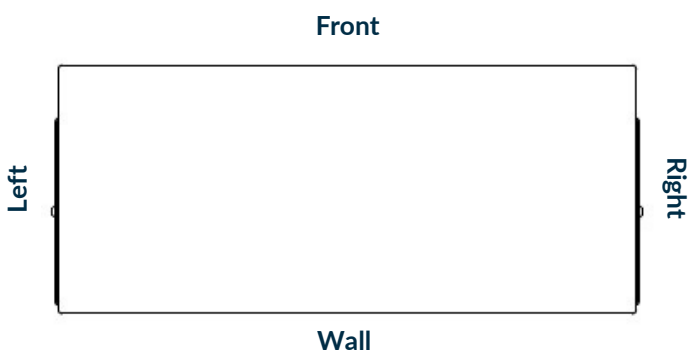

Right Side Of Cistern

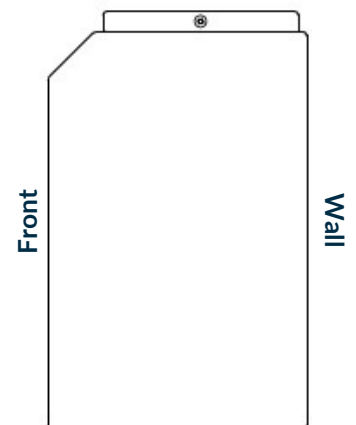

Pre fabricated items are non returnable and non refundable
All MTO products have a lead time - please confirm prior to ordering
Email - orders@3monkeez.com.au

Company:

Name:

Signature:

Purchase Order Number:

Date:

Phone Number: