



# SCHELL RETRO FIT KIT / REPLACEMENT KIT INSTRUCTIONS

# Assembly and Installation Instructions to Convert the SCHELL COMPACT HF Electronic to the SCHELL COMPACT RD Electronic Sensor Urinal Valve

The HF Electronic had a separate Electronic Control Module and Senor and any stream of liquid once detected by the Sensor would active the Electronic to flush the urinal.

The RD Electronic has a single Electronic Sensor/Control Module that uses a radar detection system to detect the movement of the user and then flush the urinal.

\*The components of the Schell Compact RD Urinal Retro Fit Kit are installed using the existing Water Path, Rough-In Set and DR Adapter and Solenoid Valve.


\*Ensure that you do not remove the existing Control Module Sensor Cable until you have installed the two new Extension Cables.

- Remove the urinal from the wall and remove the existing sensor.
   Note: the new Sensor/Control Module will be positioned at a higher point
- 2. Using electrical tape or cable ties, attach the two new extension cables to the old sensor lead coming from the HF Control Module. Then pull them through the conduit to chase them up behind the wall. Note: you will need one male and one female end for correct connection Note: you can now completely remove the old HF Control Module
- 3. Disconnect the Solenoid from the old HF Control Module.
- 4. Remove the old HF Transformer and replace with the new RD Transformer supplied.
- 5. One Extension Cable connects to the existing Solenoid and the one Extension Cable connects to the new RD Transformer.
- 6. Attach the RD Electronic Sensor/Control Module to the back of the urinal, using the supplied adhesive strip.

Note: Refer to Sensor Installation on page three of complete installation instructions.

- The adhesive must be applied to the sides of the sensor housing only
- There must be no adhesive between the sensor housing and the urinal wall
- The sensor/electronic must be placed at a level above the height of the front rim of the urinal
- 7. Connect the Extension Cables to the Sensor/Control Module.
- 8. Please use this detail in conjunction with the complete Assembly and Installation Instructions for the SCHELL COMPACT RD electronic sensor urinal valve.

# Assembly and installation instructions for the SCHELL COMPACT RD electronic sensor urinal valve

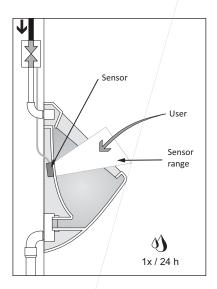

#### Scope of supply

- Solenoid valve
- Compact rough-in set with air-break
- RD Electronic sensor/control module
- Power supply
- Cables\*
- Adhesive
- Screwdriver
  - /

### **Operation Description**

The Compact RD uses a Radar Detection system to detect the movement of a user.

The system is unaffected by common ambient influences such as light, people passing by and nearby structures.

The system also includes a programmed self sensing stadium mode and a periodic stagnation/hygiene flush.

Flushing volume can be adjusted to deliver 0.6 - 6L of water in a single flush

#### **Technical Data**

- Flow pressure: 50 - 500kPa

- Flow rate: 0.31/sec

- Power supply: 240V 50/60Hz

- Output: 7.5V 1A

- Noise class II

Protection class: IP64

- Stagnation/hygiene flush: 20sec - 24 hours after last use

- Automatic stadium mode


E-Module/Sensor: Conformity with R & TT 1999/05/EC, EMC 89/336/E

<sup>\*</sup> All supplied cables are 5m long.

## **Operation Sequence**

- 1. Use urinal.
- **2.** Approximately 5 seconds dwell time elapses after moving away.
- 3. Flush operation.

Flush is adjustable 2-20 seconds (see p4). Factory flush setting - 20 seconds. Flushing is locked for approximately 8 seconds after each flush.

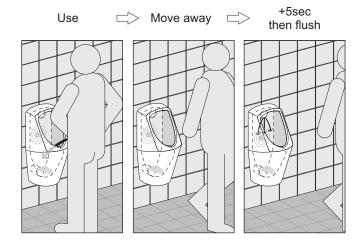


#### Note:

- Stadium mode will automatically commence when there are >3 uses within 4 minutes.
- Stadium mode operates 1 flush/minute.
- Stadium mode will finish when no use is detected for 5 minutes.
- A 20 sec stagnation/hygiene flush operates every 24 hours of non-use.




### **Component list**


- 1. Compact rough-in set with air break
- 2. Power supply
- 3. Solenoid valve
- 4. Sensor/control module
- 5. Flush pipe (not included)
- 6. Power connecting cable
- 7. Solenoid connecting cable
- 8. Conduit (not included)

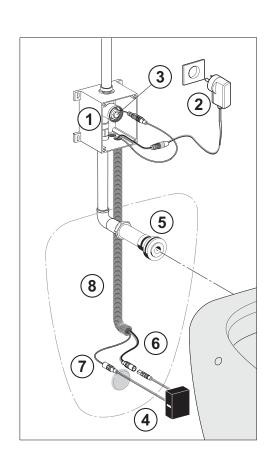

## **Assembly**

Complete the water supply connection to the flush valve.
 Important: the flush valve must be installed vertically and the lines <u>must</u> be flushed prior to fitting the solenoid valve.

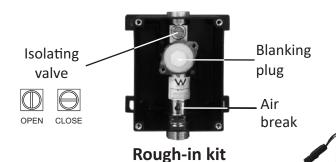

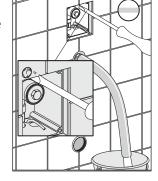


- **2.** Remove the white plastic blanking plug from the solenoid cavity
- **3.** Screw in the solenoid valve hand tighten only
- **4.** Pull the extension cables through the conduit note that the conduit must have no kinks in it
- 5. Connect the extension cables to the sensor, power supply and solenoid
- **6.** Connect the supply transformer to power point. **Important** ensure that the correct wiring connections are made prior to installing the urinal.


Note: Surge protectors are recommended to avoid power spikes affecting the life of the transformer and control module




- Locate and clean the fixing location of the sensor on the ceramic piece.
   Mark the location with a felt tip pen.
- 2. Cut and apply the strip adhesive only to the sides of the sensor housing there must be no adhesive between the sensor housing and the urinal wall
- **3.** Press the sensor module firmly into position and hold in place for approximately 20 seconds

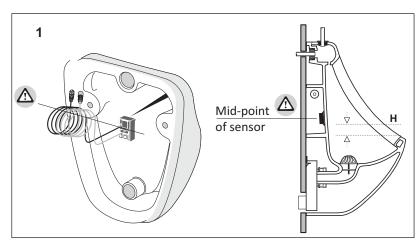

Solenoid

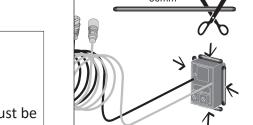

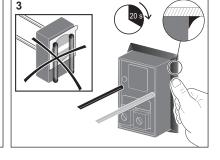

#### **IMPORTANT**:




Position of the sensor depends on the urinal selected. The sensor must be placed at the back of the urinal, at a level <u>above</u> the height of the front rim of the urinal (as per 'H' dimension)!

### **Sensor Adjustment**

- 1. LED indicator light
- 2. Use the screwdriver supplied to adjust the radar sensitivity (range 0 50 centimetres) Set at approximately 40cm.
- **3.** Use the screwdriver supplied to adjust the flush time (2 20 seconds)


Note: for a single stall set the timer to ~5 seconds

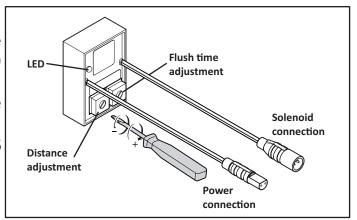

#### **Commissioning**

#### **Function Test (Dry)**


- 1. Close the isolating valve
- 2. Ensure that the power supply is OFF
- 3. Check that all cables are properly connected
- 4. Turn the power supply ON
- **5.** Within 60 seconds of power on, move your hand in front of the sensor position and verify that the LED turns on. This confirms correct operation
- **6.** Turn OFF the power supply while mounting the ceramic urinal

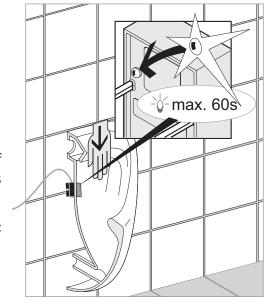

#### **Function Test (Wet)**

With the urinal fitted in position, connected and power on, conduct the following test:

- 1. Turn isolating valve on.
- **2.** Using a suitable container pour approximately 100-150ml into the urinal bowl in the sensor area.
- **3.** Flushing will occur after a time delay of approximately 5 seconds.
- **4.** After approximately 8 seconds (lock period after flush) repeat the test.
- 5. In the event of a malfunction refer to the error checklist P. 5

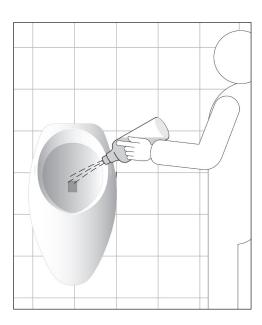

# **Error Checklist**

Fault	Possible cause	Remedy
Not flushing	No water	Open isolating valve
	No power supply	Check mains connection and plug in connections
	Insufficient test water quantity	Pour approx 100-150ml water into urinal
	Test interval too short	Time difference after flushing (water still running) approx 8s.
	Sensor not mounted correctly	Check position and direction of arrow of sensor
	Sensor sensitivity not correct	Increase sensor sensitivity
	Water running for too long	Install supply set with backflow preventer, if necessary replace solenoid valve
	Sensor module defective	Replace
Continuous flow	Flow pressure too low	Open isolating valve (min. 0.5bar)
	Sensor module placed too low	Refer to correct installation in P.3
	Incorrect application of the adhesive that holds sensor in place	Ensure the adhesive is NOT applied between the sensor and the ceramics, but around the sensor housing. refer to P.3 for correct installation.
	Solenoid valve defective	Replace
	Sensor module defective	Replace
Insufficient flushing	Flow pressure too low	Open isolating valve (min. 0.5bar)
	Flush time too short	Adjust the flush time

# **Typical installation solutions**

